



SPICE CABINET GROUND CONNECTION DIAGRAM  
TYPICAL FOR STEP 3 & 6  
NOT TO SCALE

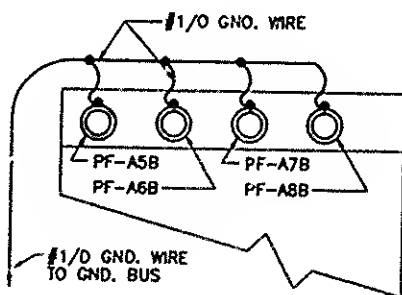



SECTION g-g

- STEPS REQUIRED FOR 15KV FEEDER INSTALLATION**
1. DE-ENERGIZE FEEDER.
  2. REMOVE EXIST. ARCPROOFING.
  3. BREAK EXIST. SPLICES (3) AND DISCONNECT GND. WIRE AS REQ'D.
  4. REMOVE EXIST. CONDUIT & WIRE TO 1500KVA TRANSF. SWITCH.
  5. INSTALL CONDUIT & WIRE TO 2000KVA TRANSF. BKR. HV-B.
  6. RE-MAKE SPLICES (3) AND CONNECT GND WIRING AS SHOWN (REMOVE BARRIER IF REQ'D.)
  7. MAKE CONNECTIONS AT 2000KVA TRANSF. BKR. HV-B.
  8. INSTALL ARCPROOFING.
  9. TEST FEEDER AND RE-ENERGIZE.

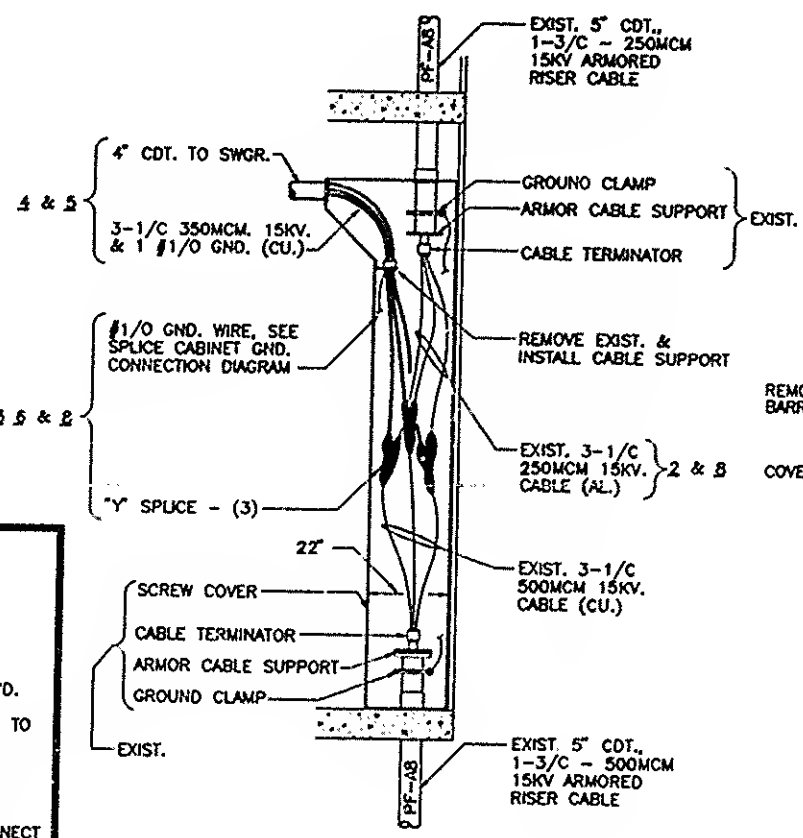

SECTION A-A  
NOTE: PF-A5, A6, & A7 ARE TYPICAL

DETAIL "A"  
15KV. SPICE CABINET  
SCALE IN FEET  
0 1 2 3 4 5

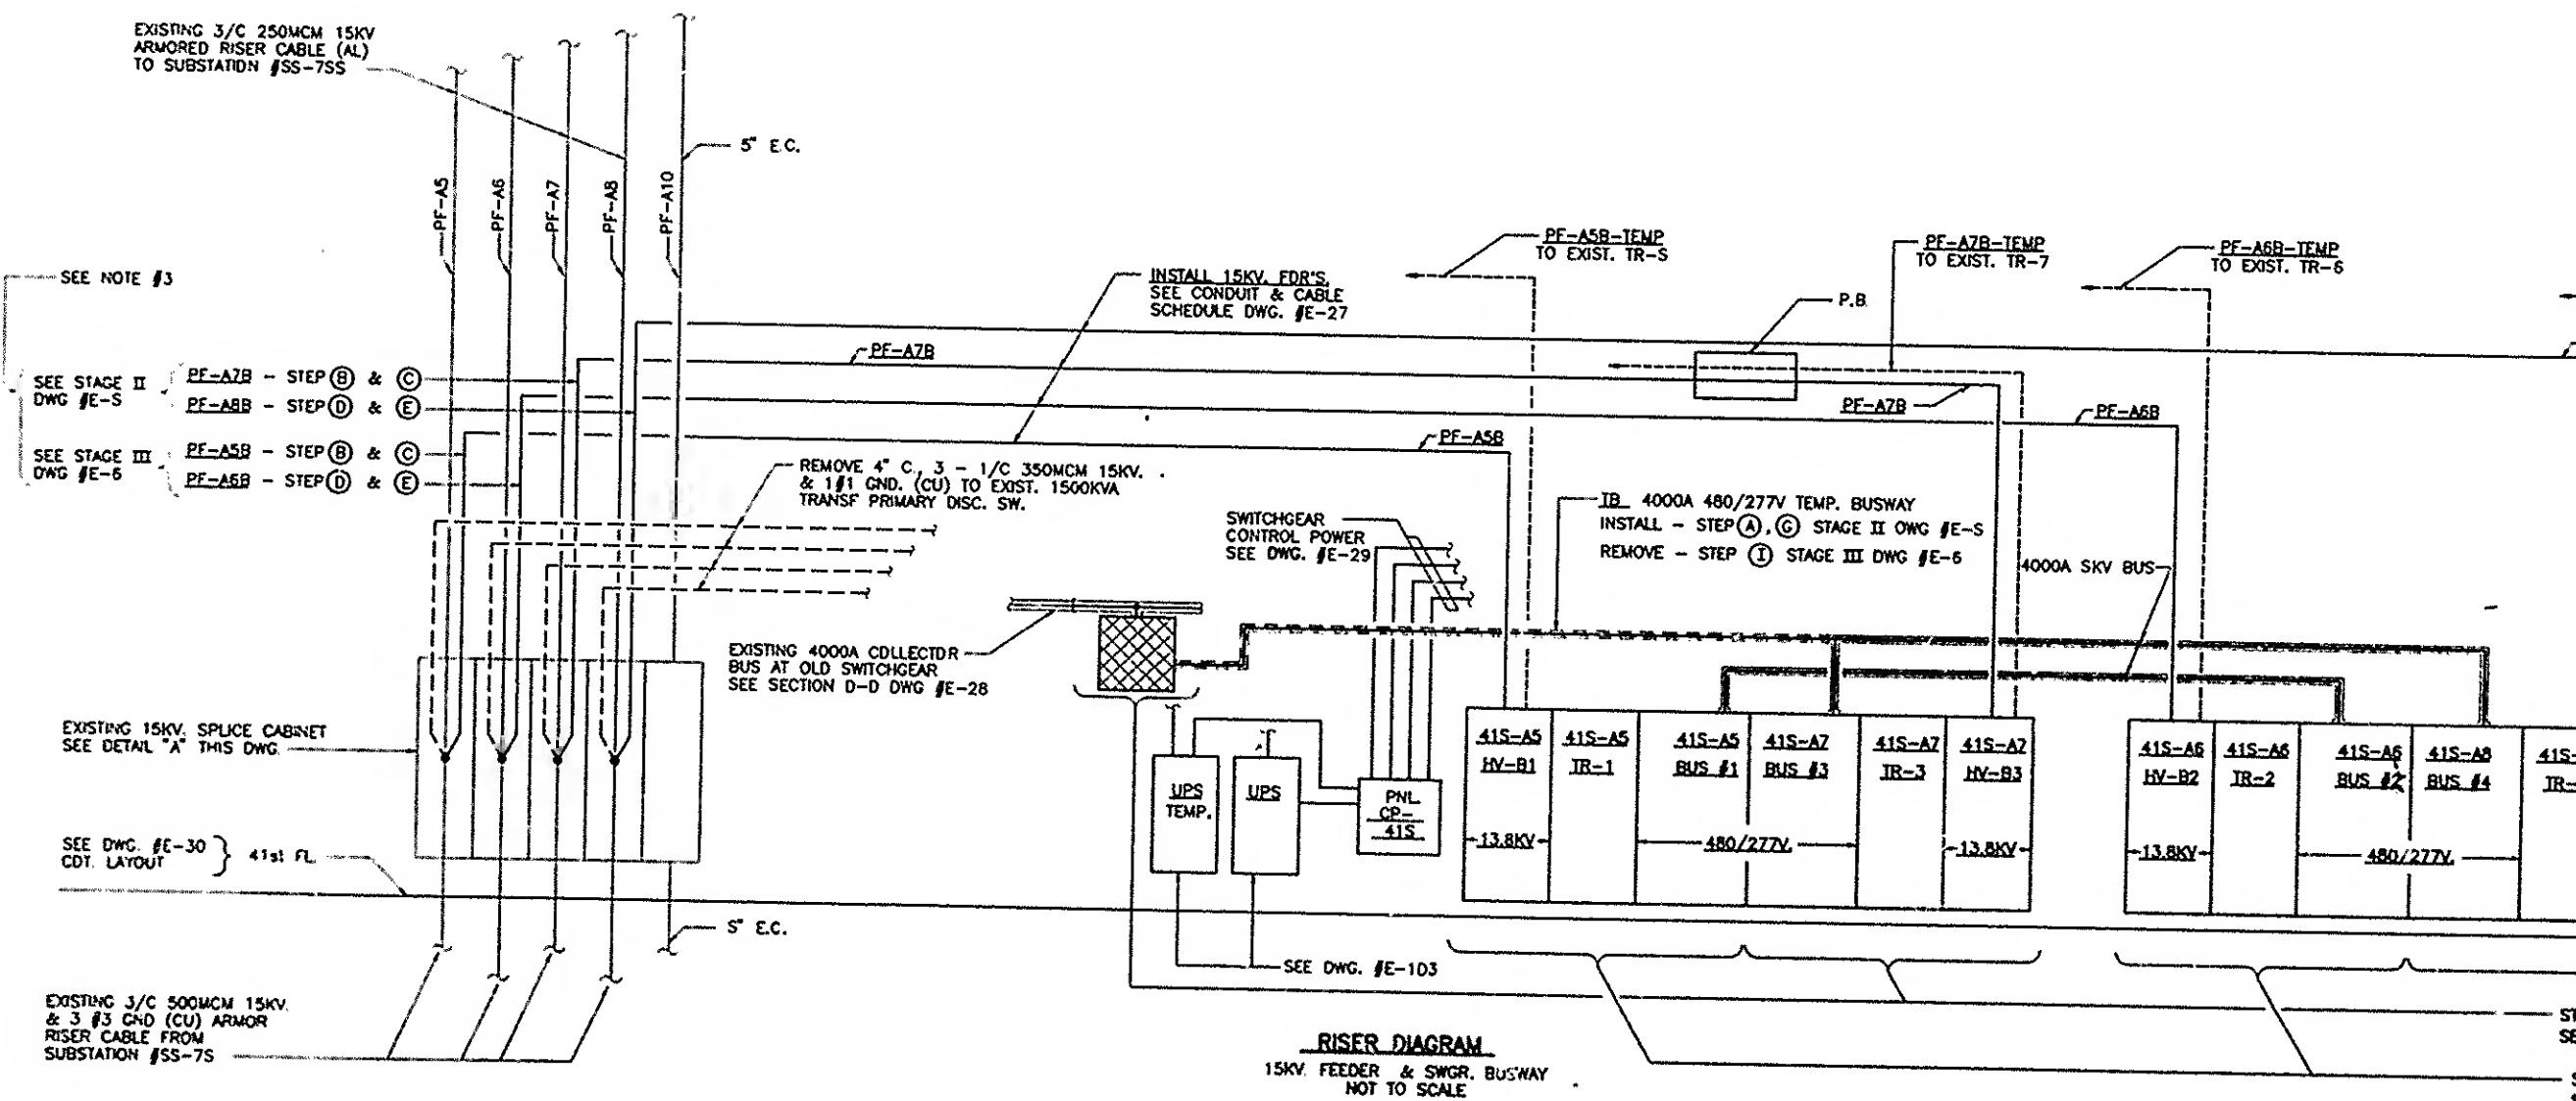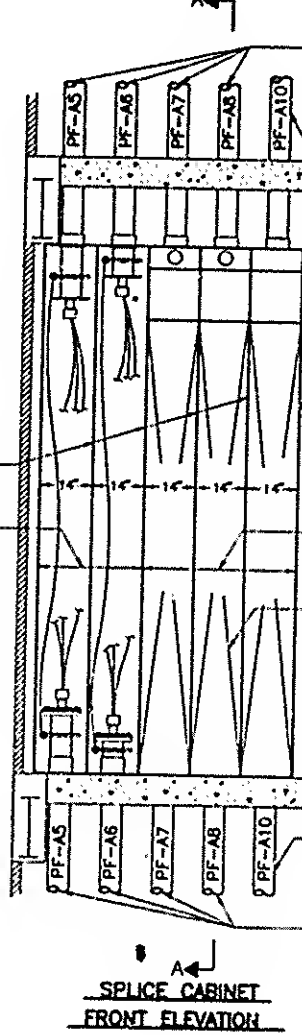

RISER DIAGRAM  
15KV. FEEDER & SWGR. BUSWAY  
NOT TO SCALE